

FREEFLY Wi-Fi ADAPTER INSTALLATION GUIDE




INSTALLATION PROCEDURE

With the MōVI Wi-Fi Adapter you can now connect to your MōVI with your iOS device via a Wi-Fi connection. Get your MōVI dialed in just the way you like it.

Please read the instructions thoroughly before proceeding with installation. Steps 1, 2, 3 and 4 are not necessary if you have a MōVI Controller Receiver. Unplug the 5-pin cable from the MōVI Controller Receiver and begin to follow steps 5-10.


NOTE: Disconnecting the MōVI Controller Receiver will disable its functionality.

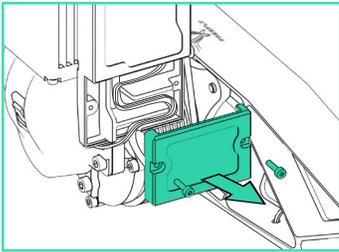

STEP 01

Remove the strain relief cover from the Gimbal Controller.


Does not apply to MōVI M10.

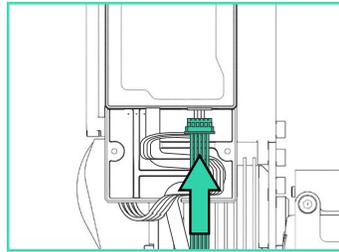

STEP 02

Plug the longer 5-pin cable into the MōVI data port on the Gimbal Controller.


Use the SHORTER 5-pin cable if installing on a MōVI M10.

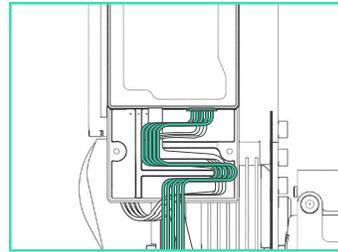

STEP 03

Route the 5-pin cable with the other wires through the strain relief track.


Does not apply to MōVI M10.

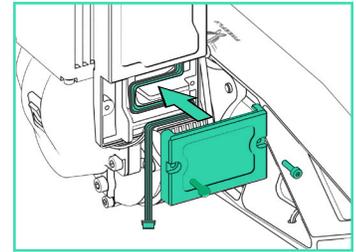

STEP 04


Replace the strain relief cover.

Does not apply to MōVI M10.

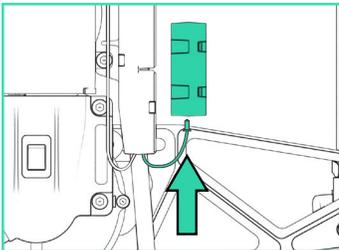


STEP 05

Plug the other end of the 5-pin cable into the MōVI Wi-Fi Adapter.

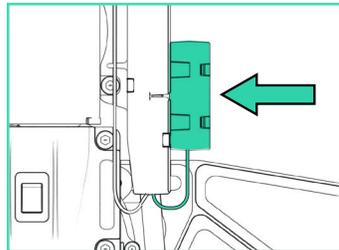


STEP 06

Attach the MōVI Wi-Fi Adapter to the Gimbal Controller as shown using the included double sided adhesive.

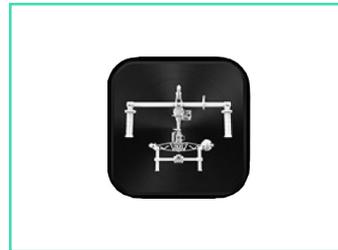


STEP 07

Download the "Freefly MōVI" app from the Apple App Store.

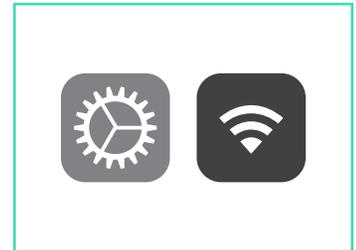

STEP 08


Confirm that your MōVI is powered on. In your iOS device go in to Settings>Wi-Fi.

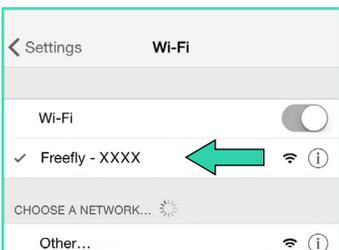

STEP 09

Select the MōVI Wi-Fi Adapter's network name: "Freefly-XXXX"

SSID will be unique to the MōVI Wi-Fi adapter.

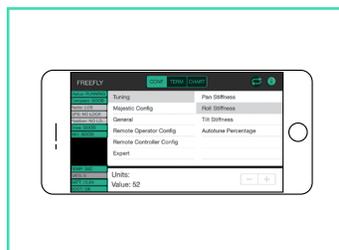

STEP 10

Opening the Freefly MōVI App will then automatically connect you to your MōVI. You can now configure your MōVI the way you like it.